
AMWF-BU

PNEUMATIC FLEX LOCATOR BUSHINGS

R⊕#S



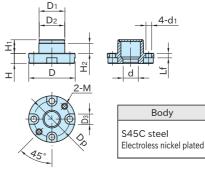



Part Number	D ₁ (g6)	H ₂	D ₂	H ₁	D	Н	d (E7)	d ₁	Lf	Dз	М	Dp	Weight (g)
AMWF18-BU	20	7.5	19.6	10.5	36	8	12.1	4.5	3.5	8	M4×0.7	28	57
AMWF26-BU	25	7	24.6	11	44	9.5	16.1	5.5	4	9.5	M5×0.8	34	97


Reference

- ·How To Install PNEUMATIC FLEX LOCATORS
- · How To Use PNEUMATIC FLEX LOCATORS


Related Product

AMWF-L-S PNEUMATIC FLEX LOCATOR PINS


Feature

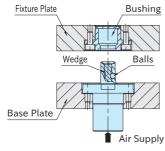

Supply air for unclamping. The wedge goes up and releases the balls.

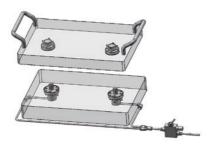

 Quick clamping and unclamping reduce set-up time in production equipment.



Release air for clamping. The wedge goes down and pushes the balls to pull down the bushing. Can keep clamped without air supply.



Locating Repeatability: $\pm 10 \,\mu$ m The bushing is centered and clamped when the 3 balls are pushed out to gain high locating repeatability.